

HiLite User Guide

Handpoint

HiLite User Guide

Table of Contents

1	<u>QUICK GETTING STARTEDGUIDE</u>	<u>3</u>
1.2	GETTING TO KNOW YOUR HILITE	4
1.3	HOW ITWORKS	5
1.4	GET STARTED.....	6
2	<u>HILITE SPECIFICATIONS.....</u>	<u>7</u>
2.1	HARDWARE TECHNICALSPECIFICATION	7
2.2	TERMINAL SOFTWARE ANDCONFIGURATIONS	7
2.3	SECURITY	7
3.1	CONNECTING YOUR HILITE	8
3.2	TRANSACTIONS	8
3.2.1	CHIP & PIN	8
3.2.2	CHIP & SIGNATURE	8
3.2.3	FALLBACK TO MAGNETICSTRIPE.....	9
3.2.4	MAGNETIC STRIPE.....	9
3.2.5	PIN BYPASS	10
3.2.6	GRATUITY/TIPS	10
3.2.7	ACCOUNT TYPE SELECTION.....	11
3.2.8	CARDHOLDER POINT OF SALE APPLICATION SELECTION.....	11
3.3	ADMINISTRATION MENU	12
3.4	VIEW INFORMATION	13
3.5	BACKLIGHT & DISPLAY CONTROL	13
3.6	UPDATING THE HILITE	13
4	<u>TROUBLESHOOTING</u>	<u>15</u>
4.1	TROUBLESHOOTING ISSUES	15
4.1.1	COMMUNICATION ERRORS.....	15
4.1.2	FLASH CORRUPTION ERRORS.....	16
4.2	HILITE MESSAGES.....	17
4.2.1	TRANSACTION MESSAGES.....	17
4.2.2	UPDATING MESSAGES.....	20
4.2.3	ADMINISTRATION MESSAGES	21
5	<u>GETTING SUPPORT</u>	<u>23</u>

1 QUICK GETTING STARTED GUIDE

This guide will help you get to know your HiLite and make your first transaction.

1.1 WHAT'S IN THE BOX?

When you receive the box, check if the Handpoint seal is still intact. It should show you if someone has opened the box before you. Inside the box you should find your HiLite and a USB mini-B connector.



1.2 GETTING TO KNOW YOUR HiLITE


Here is your HiLite from all angles. The table below describes what you see.



#	Name	Description
0	NFC Status Lights	These lights indicate the status of a contactless transaction (not supported)
1	Clock	Shows the time, hours : minutes : seconds
2	Icons	Here on the screen are icons which show battery life and other info (see section X.X)
3	Bluetooth name	Look for this name in your Bluetooth device list on your smart phone, tablet or computer, the last nine digits of this number is also your serial number.
4	Keypad	To input the pin number or other info
5	Power	To turn on and off, hold button down for a couple of seconds
6	Up/down arrows	To move up and down menus, to select press OK
7	Cancel	To cancel transactions when applicable, or other actions
8	Back	To erase keyed numbers
9	OK	To select or confirm actions
10	USB mini-B plug	Plug in the USB mini-B connector to charge the battery using a computer or a USB charger
11	Magnetic stripe reader	Swipe card with the magnetic stripe facing forward
12	EMV chip reader	Insert card with chip into the slot
13	Hardware label	Show the Hardware Version (HW ver), Serial Number (SN) and barcode

1.3 HOW IT WORKS

Here is the short version of how the Handpoint solution works:

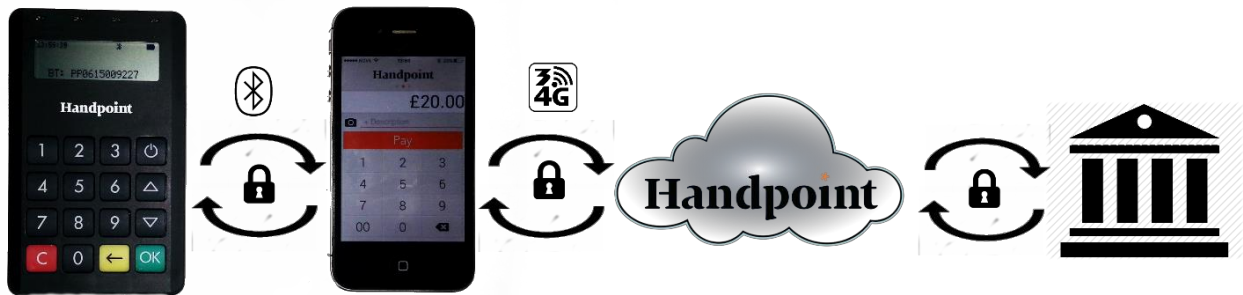




1. The Point of Sale application (POS app) on your device initiates a transaction on the HiLite using Bluetooth
2. Customer inserts card and follows the directions on the HiLite screen
3. The HiLite sends the transaction information encrypted via Bluetooth to the POS app
4. The POS app forwards the encrypted transaction information to the Handpoint gateway via an internet connection which processes the transaction using your acquirer
5. The Handpoint gateway receives a response from the acquirer and forwards the encrypted response to its internet connection
6. The POS app forwards the encrypted response to the HiLite via Bluetooth
7. The HiLite reads the response, finalizes the transaction and sends a receipt to the POS app
8. Customer removes card and the merchant provides the customer the receipt through the POS app

1.4 GET STARTED

The first time you connect, you have to register the HiLite to the point of sale application. Please follow the instructions in your POS app to connect and register. Each version of the POS app (Point of Sale application) does this differently.

The first transaction:

1. Make sure that the smartphone, computer or tablet you're using with the HiLite has Bluetooth turned on
2. Turn on the HiLite by pressing and holding  (power button) for a couple of seconds
3. Pair the HiLite to the Bluetooth device
4. Follow the instructions on your POS app to register the HiLite
5. Wait until you see the Bluetooth icon  on the HiLite screen (see #2 in section 1.2). When that icon appears, the HiLite is connected. This may take a few seconds
6. Initiate a transaction in the POS app on the smart phone, computer or tablet
7. When the message "**UPDATING READER**" appears, the HiLite will start downloading and installing the update. When the HiLite has finished, the message "**UPDATE COMPLETE**" will appear
8. When the message "**INSERT CARD**" is displayed, insert the card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite
9. Enter PIN using the keypad and press **OK** (use  [back button] to erase and then the keypad to re-enter pin if you make a mistake), or cancel by pressing **C**
10. When message "**REMOVE CARD**" appears, remove the card from the EMV chip reader

The POS app is responsible for providing the customer with the receipt created by the HiLite.

2 HiLITE SPECIFICATIONS

Here below are the technical specifications of the HiLite and information about the software and configurations.

2.1 HARDWARE TECHNICAL SPECIFICATION

<i>Display</i>	LCD, monochrome, 128x32
<i>Card readers</i>	Landingtype smart card reader, triple track bi-directional magnetic card reader
<i>Battery</i>	Rechargeable Li-po 3.7V, 620 mAh
<i>Connectivity</i>	Bluetooth 3.0 Class 2
<i>Certifications</i>	CE, FCC, PCIPTS 3.x, EMV Level 1 Contact, EMV Level 2 Contact, EMV Level 1 Contactless, VISA payWave, MasterCard Contactless, American Express Expresspay, Discover Zip, Apple® MFi
<i>Dimensions (LxWxH), mm</i>	110 x 69 x 17
<i>Weight, g</i>	123
<i>Operational temperature range</i>	-10 °C to +40 °C / 5 to 90% RH
<i>Storage temperature range</i>	-15 °C to +50 °C / 5 to 90% RH
<i>Drop test</i>	1.5 m, 6 faces + 4 edges on concrete
<i>Power Supply</i>	5V through mini USB

2.2 TERMINAL SOFTWARE AND CONFIGURATIONS

Handpoint develops the terminal software as well as the terminal configurations. The terminal software communicates with your POS app (Point of Sale application) using Bluetooth.

The configuration is specific to each merchant and cannot be seen or modified by you. The configurations are created by the Handpoint system and remotely pushed to your HiLite.

In the case of a critical update, Handpoint can automatically and remotely push the latest software or configuration version onto your HiLite.

Section 3.3 shows you how to find which software and configuration versions your HiLite has.

2.3 SECURITY

All card information is encrypted using 3DES with a DUKPT key management process. Each transaction is encrypted with 3DES using a unique key per transaction before being sent to the Handpoint gateway through the POS app. The Handpoint's terminal software is certified as PCI P2PE (point-to-point encryption) compliant.

3 HiLite USER GUIDE


 
Here are further instructions how to use the different functions of your HiLite.

3.1 CONNECTING YOUR HiLite

To be able to take payments your HiLite needs to be connected via Bluetooth to a smartphone, computer or tablet with a POS app (Point of Sale application) that works with it.

The first time you connect you have to register the HiLite to your POS app. Please follow the instructions from your POS app to connect and register. Each POS app does this differently.

Connecting via Bluetooth:

1. Make sure that the smartphone, computer or tablet you're using with the HiLite has Bluetooth turned on
2. Turn on the HiLite by pressing and holding  (power button) for a couple of seconds
3. Pair the HiLite to the Bluetooth device
4. Wait until you see the Bluetooth icon  on the HiLite screen (see #2 in section 1.2). When that icon appears, the HiLite is connected

Your device and the HiLite should find each other every time as long as the Bluetooth of your device is on. If you are prompted to enter a pairing code, enter "0000" as the code.

 
3.2 TRANSACTIONS

Transactions are initiated by the POS app on your smart phone, tablet or computer. Depending on your acquirer and or agreement with your POS app provider, the following features may be enabled.

3.2.1 Chip & Pin

The HiLite supports chip & pin cards. For chip & pin transactions use the EMV chip reader (see #12 in section 1.2).

This is an example of what happens in a chip & pin transaction:

1. Transaction is initiated in the POS app on the smart phone, computer or tablet
2. When message "INSERT CARD" appears, insert card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite
3. Enter PIN using the keypad and press **OK** (Use  [back button] to erase and then use the keypad to re-enter pin if you make a mistake), or cancel by pressing **C**
4. When message "REMOVE CARD" appears, remove the card from the EMV chip reader

The POS app is responsible for providing the customer with the receipt created by the HiLite.

3.2.2 Chip & Signature

The HiLite supports chip & signature cards. For chip & signature transactions use the EMV chip reader (see #12 in section 1.2).

This is an example of what happens in a chip & signature transaction:

1. Transaction is initiated in the POS app on the smart phone, computer or tablet
2. When message “**INSERT CARD**” appears, insert card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite
3. Confirm the amount by pressing **OK** or cancel by pressing **C**

The POS app is responsible for providing the customer with the receipt created by the HiLite. The customer should sign the receipt.

3.2.3 Fallback to Magnetic Stripe

If the HiLite cannot read the chip for some reason it will fallback to magnetic stripe. The HiLite will prompt you to remove the card from the EMV chip reader (see #12 in section 1.2) and swipe the card using the magnetic stripe reader (see #11 in section 1.2). The HiLite might ask you to remove and insert the card into the EMV chip reader a couple of times before falling back to magnetic stripe.

This is an example of what happens if a transaction falls back to magnetic stripe:

1. Transaction is initiated in the POS app on the smart phone, computer or tablet
2. When message “**INSERT CARD**” appears, insert card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite
3. If the HiLite cannot read the chip message “**REMOVE CARD**” appears, remove the card
4. When message “**INSERT CARD**” appears, insert card in the EMV chip reader
5. If the HiLite cannot read the chip message “**REMOVE CARD**” appears, remove the card
6. When message “**INSERT CARD**” appears, insert card in the EMV chip reader
7. If the HiLite cannot read the chip message “**REMOVE CARD**” appears, remove the card
8. When message “**SWIPE CARD**” appears, swipe card using the magnetic stripe reader with the magnetic stripe facing to the front
9. Confirm the amount by pressing **OK** or cancel by pressing **C**

The POS app is responsible for providing the customer with the receipt created by the HiLite. The customer should sign the receipt.

3.2.4 Magnetic Stripe

The HiLite supports cards that only have magnetic stripes. To do a transaction with a magnetic stripe card use the magnetic stripe reader (see #11 in section 1.2). If the card has a chip the HiLite will prompt you to use the EMV chip reader.

This is an example of what happens in a magnetic stripe transaction:

1. Transaction is initiated in the POS app on the smart phone, computer or tablet
2. When message “**INSERT CARD**” appears, swipe card using the magnetic stripe reader with the magnetic stripe facing to the front
3. Confirm the amount by pressing **OK** or cancel by pressing **C**

The POS app is responsible for providing the customer with the receipt created by the HiLite. The customer should sign the receipt.

3.2.5 Pin Bypass

Pin bypass is only enabled for specific acquirers. Pin bypass allows the customer to choose if they want to enter pin or not.

This is an example of what happens in a chip & pin transaction with pin bypass:

1. Transaction is initiated in the POS app on the smart phone, computer or tablet
2. When message “**INSERT CARD**” appears, insert card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite
3. To bypass the pin, press OK instead of entering the pin (if pin bypass is not enabled, the HiLite will show the message “**NOT ALLOWED**”)
4. When message “**REMOVE CARD**” appears, remove the card from the EMV chip reader

The POS app is responsible for providing the customer with the receipt created by the HiLite.

3.2.6 Gratuity/Tips

To get the gratuity/tips feature you have to ask for it especially from your POS app provider. The menu appears before pin entry where the customer can choose how much he wants to tip. Here is an example of the default gratuity/tip menu for a £20,00 sale:

Menu item
No tip
18% GBP3,60
20% GBP4,00
25% GBP5,00
Enter amount

This is what happens in a chip & pin transaction with gratuity/tips enabled:

1. Transaction is initiated in the POS app on the smart phone, computer, or tablet
2. When message “**INSERT CARD**” appears, insert card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite
3. When the gratuity/tips menu appears, scroll menu using ▲ (up arrow) and ▼ (down arrow) to select how much you want to tip
4. Press **OK** to select tip amount, if you select “**ENTER AMOUNT**”:
 - a. Enter tip amount using the keypad (use ← [back button] to erase and then the keypad to re-enter amount if you make a mistake)
 - b. Press **OK**
5. Enter PIN using the keypad and press **OK** (use ← [back button] to erase and then the keypad to re-enter pin if you make a mistake)
6. When message “**REMOVE CARD**” appears, remove the card from the EMV chip reader

The POS app is responsible for providing the customer with the receipt created by the HiLite.

3.2.7 Account Type Selection

The account type selection is only enabled for specific acquirers and only appears for cards that have multiple accounts. The menu appears before pin entry where the customer can choose which account he wants to use for that transaction. Here is an example of menu items, they differ between acquirers and cards:

Menu item
Default
Savings
Cheque/debit
Credit

This is what happens in a chip & pin transaction with the account type selection enabled:

1. Transaction is initiated in the POS app on the smart phone, computer or tablet
2. When message **"INSERT CARD"** appears, insert card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite
3. When the account type menu appears, scroll menu using ▲ (up arrow) and ▼ (down arrow) to find the right account type
4. Press **OK** to select account type
5. Enter PIN using the keypad and press **OK** (use ← [back button] to erase and then the keypad to re-enter pin if you make a mistake)
6. When message **"REMOVE CARD"** appears, remove the card from the EMV chip reader

The POS app is responsible for providing the customer with the receipt created by the HiLite.

3.2.8 Cardholder Point of Sale Application Selection

The cardholder POS app selection is only enabled for specific acquirers. The menu appears before pin entry where the customer can choose which payment application he wants to use for that transaction. Here is a list of menu items:

Menu item
Credit
Debit
Cash Benefit
Food Stamp
Gift Card
Private Label

This is what happens in a chip & pin transaction with the cardholder point of sale application selection enabled:

1. Transaction is initiated in the POS app on the smart phone, computer, or tablet
2. When message **"INSERT CARD"** appears, insert card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite

3. When the POS application menu appears, scroll menu using ▲ [up arrow] and ▼ (down arrow) to find the right POS app
4. Press **OK** to select POS app
5. Enter PIN using the keypad and press **OK** (use ← [back button] to erase and then the keypad to re-enter pin if you make a mistake)
6. When message “**REMOVE CARD**” appears, remove the card from the EMV chip reader

The POS app is responsible for providing the customer with the receipt created by the HiLite.

3.3 ADMINISTRATION MENU

To access the administration menu:

1. Press **C** and ← (back button)
2. Enter password: **746723** and press **OK**
3. Scroll menu using ▲ (up arrow) and ▼ (down arrow)
4. To go into sub-menus press **OK**
5. To select menu items press **OK**
6. To go out of menus press **C**

Administration menu password: **746723**

About each menu item:

Menu item	Sub-menu items	Description
Version info	-	Terminal software version e.g. mPOS v.1.7.1 (236)
Device type	Serial	A connection type, not supported by HiLite
	USB Mode	A connection type, not supported by HiLite
	Bluetooth	A connection type, supported - there should be star next to Bluetooth which means it is selected.
	Save and Reset	Select to save any changes you have made in this sub-menu, the HiLite restarts.
Config	Reset flash	Resets to factory settings, next time you do a transaction the HiLite will download and install the software and configurations again.
	Save and Reset	Select to save any changes you have made in this sub-menu, the HiLite restarts.
Screen	Font	Select either Normal (6x8) or Big (8x16).
Beep	Toggle	Turn beep on or off by selecting toggle.
Save and Reset	-	Select to save any changes you have made in the administration menu, the HiLite restarts.

3.4 VIEW INFORMATION

To view information about your HiLite:

1. Press **C** then ▲ (up arrow) on the keypad
2. Scroll to see information using ▲ (up arrow) and ▼ (down arrow)
3. To exit, either wait a couple of seconds or press **C**

About the information you see:

Menu item	Description
SN	Serial number of HiLite e.g. 615009227
mPOS	Terminal software version e.g. v.1.7.1(236)
COMs	Type of connection used e.g. Bluetooth
BT	The name of your Bluetooth connection e.g. PP0615009227
Pass	Bluetooth password e.g. 0000
Config	Configuration version e.g. 1
Flash	This has information about the flash memory, used by Handpoint quality assurance
EMV	EMV version e.g. 1.09 03 210514

3.5 Backlight & Display Control

By clicking the up arrow or down arrow on the card reader you can access a settings menu which has 3 options:

- backlight
 - ON (backlight on at all times, that is the default behavior)
 - OFF (backlight off at all times)
 - AUTO (backlight on ONLY when a transaction has been started from the POS)
- invert display – changes the display from black background with white letters to white background with black letters
- Reset to default - backlight on at all times with normal display (black background and white letters)

3.6 UPDATING THE HiLITE

It depends on the POS app (Point of Sale application) if you can update the HiLite manually. Then the update is initiated through the POS app on your smart phone, computer or tablet.

Handpoint pushes updates automatically and remotely to your HiLite.

This is what happens when Handpoint pushes a non-critical update to your HiLite:

1. Transaction is initiated in the POS app on the smart phone, computer, or tablet
2. When message “INSERT CARD” appears, insert card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite
3. Enter PIN using the keypad and press **OK** (use ← [back button] to erase and then the keypad to

re-enter pin if you make a mistake)

4. When message "**REMOVE CARD**" appears, remove the card from the EMV chip reader
5. The message "**UPDATING READER**" appears and the HiLite starts downloading and installing the update, this only takes a couple of seconds. When the HiLite has finished the message "**UPDATE COMPLETE**" appears.

This is what happens when Handpoint pushes a critical update to your HiLite:

1. Transaction is initiated in the POS app on the smart phone, computer, or tablet
2. When message **"INSERT CARD"** appears, insert card in the EMV chip reader (see #12 in section 1.2) with the chip facing up and towards the HiLite
3. Enter PIN using the keypad and press **OK** (use ← [back button] to erase and then the keypad to re-enter pin if you make a mistake)
4. The gateway declines the transaction and tells the HiLite to update, message **"TRANS. DECLINED"** appears
5. When message **"REMOVE CARD"** appears, remove the card from the EMV chip reader
6. The message **"UPDATING READER"** appears and the HiLite starts downloading and installing the update, this only takes a couple of seconds. When the HiLite has finished the message **"UPDATE COMPLETE"** appears.
7. After the HiLite has finished updating initiate the transaction again to charge the customer

4 TROUBLESHOOTING

In this section are tools to help you troubleshoot. It includes instructions on how to troubleshoot communication errors between the HiLite and your smart phone, computer, or tablet, and flash corruption issues. There is also a section with tables with some of the possible messages that can appear on your HiLite. If you are having a problem, you can try searching these tables for the message and see what you can do.




4.1 TROUBLESHOOTING ISSUES

Here are some instructions to help you troubleshoot issues.

4.1.1 Communication Errors

If the HiLite shows a communication error message it means that the HiLite detected a communication failure between itself and the device that it was paired/connected to. Here is what you can do to try to troubleshoot it:

First thing to try – turn the HiLite off and on again:

1. Make sure that the smartphone, computer, or tablet you're using with the HiLite has Bluetooth turned on
2. Turn off the HiLite by pressing and holding  (power button) for a couple of seconds and pressing **OK**
3. Turn the HiLite back on by pressing and holding  (power button) for a couple of seconds
4. Wait for the HiLite to connect or follow the connection instruction from your POS app. When you see the Bluetooth icon  on the HiLite screen (see #2 in section 1.2) the HiLite is connected to the POS app.
5. Try to initiate a transaction again

Second thing to try – disconnect the Bluetooth connection and reconnect

1. Make sure that the smartphone, computer, or tablet you're using with the HiLite has Bluetooth turned on
2. Look for the Bluetooth name (#3 in section 1.2 or BT menu item in section 3.4) in your smart phone, computer, or tablet's Bluetooth list and disconnect according to the directions of your device
3. Reconnect the HiLite according to the directions of your device
4. Wait for the HiLite to connect or follow the connection instruction from your POS app. This may take a few seconds. When you see the Bluetooth icon (📶) on the HiLite screen (see #2 in section 1.2) the HiLite is connected to the POS app.
5. Try to initiate a transaction again

Third thing to try – remove the HiLite from Bluetooth devices and pair again



1. Make sure that the smartphone, computer, or tablet you're using with the HiLite has Bluetooth turned on
2. Look for the Bluetooth name (#3 in section 1.2 or BT menu item in section 3.4) in your smart phone, computer, or tablet's Bluetooth list and remove device/forget device according to the directions of your device
3. Make sure that the HiLite is turned on
4. Look for the Bluetooth name (#3 in section 1.2 or BT menu item in section 3.4) in your smart phone, computer, or tablet's Bluetooth list and pair according to the directions of your device
5. Wait until you see the Bluetooth icon (📶) on the HiLite screen (see #2 in section 1.2). This may take a few seconds. When that icon appears the HiLite is connected.
6. Try to initiate a transaction again

If the problem persists, please contact support (see section 5).

4.1.2 Flash Corruption Errors

If the HiLite is somehow not working right or doing what it's supposed to, it is always a good idea to reset the flash to see if it fixes the issue. Resetting the flash erases the working memory of the card reader clearing out any corrupted flash. After the flash has been reset on a card reader it needs to fetch the terminal software and terminal configurations again.

Resetting the flash:

1. Press **C** and  (back button)
2. Enter password: **746723** and press **OK**
3. Scroll menu using  (down arrow) to **Config** and press **OK**
4. Select **"RESET FLASH"** and press **OK**
5. Scroll down to **"Save and Reset"** and press **OK**
6. The card reader should now restart

If the problem persists then please contact support (see section 5).

4.2 HiLITE MESSAGES

Here are tables with some of the possible messages that can appear on your HiLite. If you are having a problem, you can try searching these tables for the message and see what you can do.

4.2.1 Transaction Messages

These are messages that can appear during transactions in alphabetical order. This is not an exhaustive list.

HiLite displaytext	Why it is displayed	Required action
AMOUNT: [amountvalue]	The HiLite needs the cardholder to validate that the correct amount has been used.	The cardholder must confirm that the amount is correct by pressing OK or cancel by pressing C .
APP. BLOCKED	The card application that was selected has been blocked.	The cardholder must select another application to continue or press the C/Cancel button to abort.
APP. NOT AVAILA.	The card application that was selected is not supported.	The cardholder must select another application to continue or press the C/Cancel button to abort.
APP. SELECTION->	Two or more supported card applications have been detected.	The cardholder must select the correct card application from the list to continue (e.g. VISA, MASTERCARD, AMEX, et cetera).
AUTHORISED	A transaction has completed successfully.	No further actions are required.
CANCELLED	The current operation was cancelled by either the cardholder or the merchant. Or the HiLite timed out while waiting for the card and automatically cancelled the operation.	No further actions are required.
CARD BLOCKED	The card that was used has been blocked.	Please retry the transaction with a non-blocked card.
CARD REMOVED	The card was removed too soon during a financial transaction operation.	Please restart the operation.
COMM. ERROR CHECK CONNECTION	Indicates that the HiLite detected a communication failure between itself and the device that it was paired/connected to.	If a SALE or a REFUND transaction was in progress when this occurred then you MUST contact support (see section 5) and verify whether the transaction went through or not. <i>If you fail to do so then you may be liable for any costs incurred due to any double charges.</i> Once you have verified that the transaction did not go through then please retry the operation.

COMPLETING TRANSACTION	The HiLite is finalizing a completed transaction with your device.	Please wait for further instructions on the HiLite display.
CONFIRM ->	A card application has been selected that requires confirmation before it can be used.	The card holder must confirm the application selected by pressing the OK button or cancel the selection by pressing the C/Cancel button.
FALLBACK TO MSR	The cards chip has failed. The data on the magnetic stripe will be used instead.	Please wait for further instructions on the HiLite display.
ICC NOT AVAILAB.	The card application that was selected has failed to load properly.	The cardholder must select another application to continue or press the C/Cancel button to abort.
INCORRECT PIN	An incorrect PIN was entered.	The cardholder must re-enter their PIN.
INVALID CARD	The HiLite could not read any data from the card.	Please retry the operation. If the issue persists the card may be faulty, please try another card. If the issue still persists the HiLite may require replacement, please contact support (see section 5).
LAST ATTEMPT	The retry counter for PIN entry is about to be exhausted, this is your last chance.	Please do one of the following: <ul style="list-style-type: none"> • Enter the correct PIN. • Press the 'C'/Cancel button to abort the transaction. • Press the OK button to activate PIN bypass mode (if available).
NOT ALLOWED	PIN bypass has been selected by the cardholder, but it is not allowed.	The card holder must enter their PIN to continue.
NOT PROCESSED	This is a generic error message that indicates that the current operation was not completed due to an unexpected error. Reasons can include: <ul style="list-style-type: none"> • Communication failure between the HiLite and the back end system during an update operation. • Invalid request object from the POS app at the start of an operation. • Invalid response object from the POS app during an operation. 	Please retry the operation. If the issue persists please contact support (see section 5).

PIN BYPASS SELE.	PINbypasshasbeen selectedbythe cardholder.	No further actions are required; in most cases a cardholdersignature will be required.
PIN ISBLOCKED	The maximum number of PIN entry retries has been reached.	Please wait for further instructions on the HiLite display (The HiLite may fall back to signature processing). The cardholder needs to contact their bank/issuer for instructions on how to get the PIN unblocked.
PIN VERIFIED	The PIN has been verified successfully.	No further actions are required.
PIN: [amountvalue]	The HiLite is waiting for the card PIN.	The cardholder must enter their PIN and press the OK button to continue or press the C/Cancel button to cancel the transaction.
PLEASE SIGN	The cardholder must sign their name on the slip.	The cardholder must sign the slip.
PLEASE WAIT...	The HiLite is processing an operation.	Please wait while the HiLite completes the operation.
PRESS OK or C	The HiLite needs confirmation to continue.	The cardholder must read all information on the display and then press either the OK or cancel button as applicable.
PROCESSING ERROR	An unexpected error was encountered during transaction processing.	Please retry the operation. If the issue persists please contact support (see section 5).
PROCESSING...	Cardholder authentication has completed and a financial card transaction is being processed.	Please wait for further instructions on the HiLite display.
READ ERROR	The HiLite was unable to establish a valid communication channel with the cards chip.	Please wait for further instructions on the HiLite display.
REFUND	Indicates that the current operation is a REFUND transaction.	No further actions are required.
REFUND ACCEPTED	A REFUND transaction has completed successfully.	No further actions are required.
REFUND VOID	Indicates that the current operation is a reversal/voiding of a REFUND transaction.	No further actions are required.
REMOVE CARD	The card is in the HiLite and either the transaction has completed or the HiLite cannot read the chip.	Please remove the card from the HiLite.
REQUEST INVALID	A financial transaction was attempted with a magnetic stripe card that is cash only.	No further actions are required.

REVERSAL ACCEPT.	Reversal/voiding of a SALE/REFUND transaction has completed successfully.	No further actions are required.
SALE	Indicates that the current operation is a SALE transaction.	No further actions are required.
SALE VOID	Indicates that the current operation is a reversal/voiding of a SALE transaction.	No further actions are required.
SELECTED APP.	A card application has been selected for this transaction.	No further actions are required.
SWIPE CARD	The HiLite is waiting for a card to be swiped against the magnetic stripe reader.	Please swipe a card through the magnetic stripe reader.
TRANS. DECLINED	A transaction has been declined.	No further actions are required. Further information may be displayed on the HiLite screen or receipt that might indicate why the transaction was declined.
TRANSACTION VOID	A financial transaction was cancelled due to a cardholder not responding in time to an action or directly, by the cardholder or the merchant or the card itself. Or a signature was rejected by the merchant.	No further actions are required.
UNSUPPORTED CUR.	A currency has been selected in the POS app that the HiLite has not been configured for.	Select the correct currency and retry the operation. Alternatively, please contact support (see section 5) and ask for the specific currency to be supported.
USE CHIP READER	The HiLite is waiting for a card to be inserted into the chip reader.	Please insert a card into the chip reader.
USING SIGNATURE	The card has indicated that cardholder signature is required. This can be either due to fall back (e.g. max PIN retries reached) or because the card is a signature or a signature & PIN card.	Please wait for further instructions on the HiLite display.

4.2.2 Updating Messages

These are messages that can appear while the HiLite is updating in alphabetical order. This is not an exhaustive list.

HiLite display text	Why it is displayed	Required action
CONNECTION ERROR	The HiLite detected a communication failure between itself and the backend system during an update operation.	Please verify that your device has an internet connection and then retry the operation.

DOWNLOADING	Indicates that the HiLite is downloading its update.	No further actions are required.
INSTALLING	A configuration update for the HiLite has been validated and the HiLite is applying it.	Please wait for the completion of the update process.
NO UPDATE	An update procedure was started, but there is no pending update on the backend system.	No further actions are required.
RESTARTING...	The HiLite is about to restart after a software update.	Please wait for further instructions on the HiLite display.
SOFTWARE x%	The HiLite is updating itself and has completed x% of the update.	Please wait for the completion of the update process.
UPDATE COMPLETE	An update operation has completed successfully.	No further actions are required.
UPDATE FAILURE!	An update has failed to complete.	Please retry the operation. If the issue persists please contact support (see section 5).
UPDATES x%	The HiLite is updating itself and has completed x% of the update.	Please wait for the completion of the update process.
UPDATING READER	Indicates that the HiLite has started an operation to update itself.	No further actions are required.
VALIDATING	A configuration update has been found for the HiLite and the HiLite is verifying its correctness.	Please wait for the completion of the update process.

4.2.3 Administration Messages

These are messages that can appear while the HiLite is idle or while you are in the administration menu. This is not an exhaustive list.

HiLite display text	Why it is displayed	Required action
----- no config ----	No configuration is present on the HiLite and the operator has entered the administration menu and selected the version information option.	No further actions are required.
--- no ipek loaded ---	No cryptographic keys can be found on the HiLite and the operator has entered the administration menu and selected the version information option.	Please return the HiLite back for replacement.
BATTERY LOW	The battery charge level is low.	Please recharge the HiLite.
BATTERY TOO LOW	An operation was started, but the battery charge level is too low to complete the operation.	Please recharge the HiLite.
TOTURN OFF PRESS OK or C	The power button has been pressed.	Please press the OK button to turn off the HiLite or press the C/Cancel

		button to keep the HiLite turned on.
--	--	--------------------------------------

5 GETTING SUPPORT

The POS app (Point of Sale application) provider should provide you with support for the whole solution, including the HiLite. They can contact Handpoint on your behalf, if needed.

Here is a table of information you can provide which can help the POS app provider or Handpoint solve your issue:

Information	Details	How it helps
Clear description of issue	step by step description of what you do and how the HiLite behaves	The support provider can follow your directions to reproduce the issue and experience it themselves
	error message(s)	Error message(s) give an indication of where the issue lies, the support provider can look up the error message(s) in the HiLite message List to get more details
	where and when the error is appearing	The error can be coming from: Terminal (HiLite) POS app (Point of Sale application) Gateway Acquirer
	contact information of the parties involved	Issues get resolved faster when all contact information is available.
Information about the solution	Type of terminal	Handpoint has two types of terminal, HiLite and HiPro which have different features.
	Serial number of terminal (see no.3 in section 1.2 or section 3.3)	Information about terminals configurations and their transactions can be retrieved by using the serial number.
	Terminal software version (see section 3.3)	New versions of the terminal software may fix known issues
	Info about device connected to the terminal e.g. iphone6 with iOS 9.2, samsung galaxy S6 edge with Android 5.1.1 etc...	Type of device and operating system version may not be supported or some known issues with the operating system version
	Connection type e.g. bluetooth, lightning	Different connection types may have various issues such as connectivity, driver problems, configuration etc.
Log files	Terminal Software Audit log files. It is the responsibility of the POS app to fetch logs from the terminal. Your POS app provider should be able to help you send them to support.	Logs are used for troubleshooting.

Screenshots of issue	error/warning messages or receipts	The receipts can include both information and error messages from the Handpoint gateway or the acquirer.
----------------------	------------------------------------	--

6 FAQ

Questions	Answers
Are smart-phones and tablets secure enough to accept card payments?	Not by themselves. That is why we have a separate device for reading the card and PIN entry. We never store card detail information on the smart-phone or tablet. All card information is encrypted with P2PE encryption and stored in a Handpoint PCI-DSS certified environment.
Can I accept MOTO (mail order/telephone order) payments with my card reader?	No. The card must be present to make a transaction with the card reader.
Can someone borrow my card reader and use it?	No. Your card reader is set up for your business, and your business only. The same security measures that we've taken to ensure that your card reader can't be stolen and used by a malicious party make lending the card reader to someone else not possible.
Can I use Handpoint abroad?	Yes, Handpoint can be used anywhere in the world as long as there is access to a 3G/4G or Wifi network.
Can I use multiple phones with my card reader ?	Yes, but every time you connect the card reader to a new device you will need to register it according to the POS app instructions. As such, the card reader can only connect with one device at a time.
Do I need an internet connection to use the HiLite?	Yes, you will need to connect to the internet through 3G or Wifi on your smart phone, computer or tablet for the HiLite to process payments. The HiLite sends the encrypted transaction to your smart phone, computer or tablet using Bluetooth and the POS app forwards the transaction to the Handpoint gateway using 3G or Wifi.
How do I close and send batches?	The Handpoint gateway closes the batches automatically and sends to the acquirer for settlement at midnight each day.
What about receipts?	The HiLite creates a receipt for each transaction and sends to the POS app.

	<p>The POS app is responsible for showing you and providing you a way to access the receipt e.g. through text message, email or printer</p>
<p>What happens if my card reader is lost or stolen?</p>	<p>Have no fear, there is no way to access money or card information through the card reader, so your money will stay safe. If your card reader is lost or stolen let your POS app provider know.</p>
<p>Why a separate card reader?</p>	<p>We use a separate secure card reader for reading the chip and entering the PIN to protect your customers card details. This method is the most secure way to accept payments today. No card data is ever stored on the HiLite, smart phone, computer or tablet.</p>
<p>I dropped my card reader/tried to open the casing, and now it doesn't work.</p>	<p>Our card readers have an inbuilt security fail safe mechanism which wipes the stored encryption keys if it's tampered with. This is just an additional level of security in case someone tries to alter the hardware or functionality of the card reader for nefarious purposes. For this reason, you really shouldn't attempt to open the card reader for any reason. If it isn't working, contact your vendor and order a replacement. The same goes for accidental damage. Our card readers are pretty tough and have been subjected to durability tests, but accidents do happen. In the event of accidental damage that is severe enough to cause the card reader to wipe the encryption keys, contact your provider to have a replacement sent.</p>